




**INSTRUCTIONS FOR LIGHT MOUNT BRACKET:
 LOWER GRILL LIGHT MOUNT**

**PLEASE MAKE SURE YOU READ & FOLLOW THESE INSTRUCTIONS FOR INSTALLATION
 DRAWING NOT TO SCALE**

Please make sure to check behind bumper for wiring harness & protect/ reposition the wires before drilling to prevent melting/ damage.

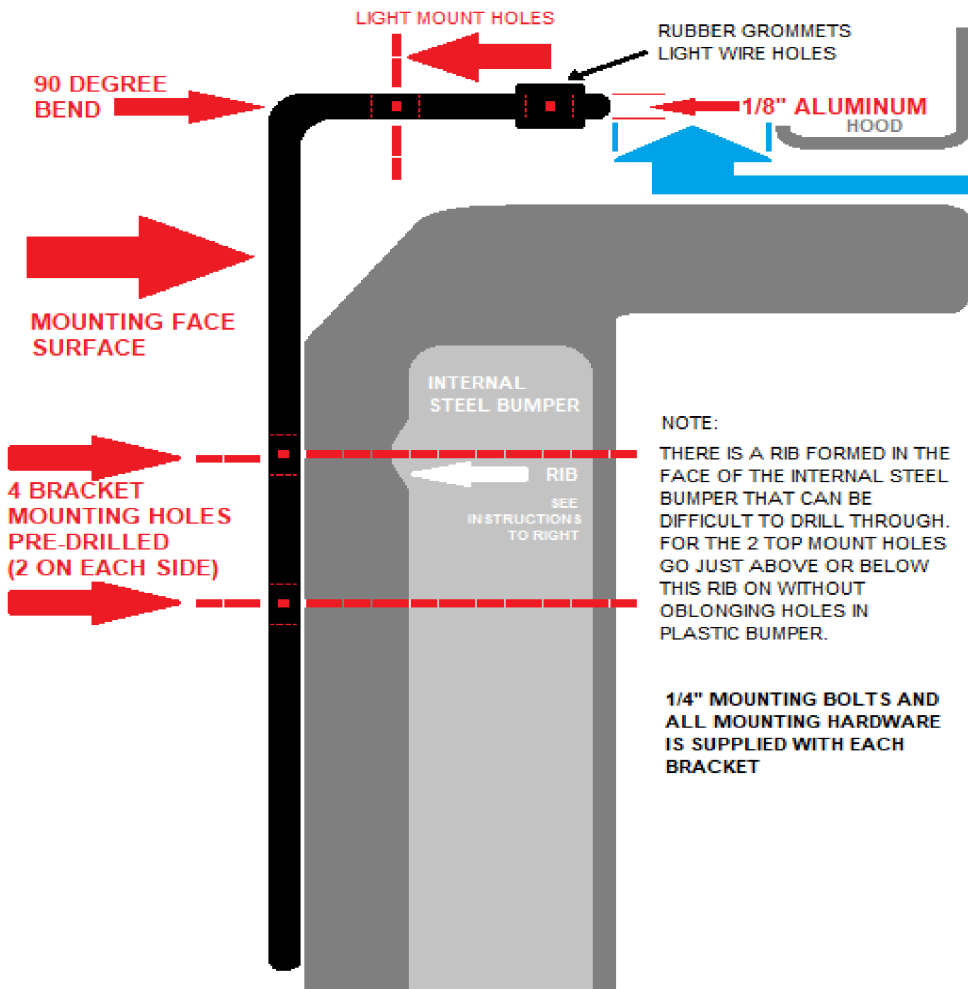

NOTE:
 GAP LEFT BETWEEN
 LIGHT MOUNTING BRACKET TOP EDGE
 & HOOD FACE TO ALLOW FOR
 ACCESS TO HOOD RELEASE LATCH &
 OPEN/CLOSE HOOD CLEARANCE

ALL BRACKETS COME WITH ALL
 HARDWARE NEEDED TO MOUNT PER
 THESE INSTRUCTIONS.


- TOOLS NEEDED:**
- DRILL
 - TYPICAL DRILL BIT SET
 - WRECHES
 - RACHET & SOCKETS
 - PHILLIPS SCREW DRIVER
 - UTILITY KNIFE TO BE USED TO TRIM ORIGINAL OEM LICENSE PLATE BRACKET IF REUSING (SEE WEBSITE FOR INSTRUCTIONS ON TRIMMING OEM LICENSE PLATE BRACKET)

NOTE:
 THERE IS A RIB FORMED IN THE
 FACE OF THE INTERNAL STEEL
 BUMPER THAT CAN BE
 DIFFICULT TO DRILL THROUGH.
 FOR THE 2 TOP MOUNT HOLES
 GO JUST ABOVE OR BELOW
 THIS RIB ON WITHOUT
 OBLONGING HOLES IN
 PLASTIC BUMPER.

1/4" MOUNTING BOLTS AND
 ALL MOUNTING HARDWARE
 IS SUPPLIED WITH EACH
 BRACKET

STANDARD POSITION LICENSE PLATE
 MOUNTING HOLES ALSO PRE-DRILLED

MOHAWK OFF-ROAD FABRICATION
 TAKES NO RESPONSIBILITY IN ANY
 DAMAGE DONE TO YOUR VEHICLE
 DURING OR AFTER INSTALLING OUR
 PRODUCTS. BY INSTALLING THIS
 PRODUCT YOU ARE MODIFYING YOUR
 VEHICLE. MOD AT YOUR OWN RISK.

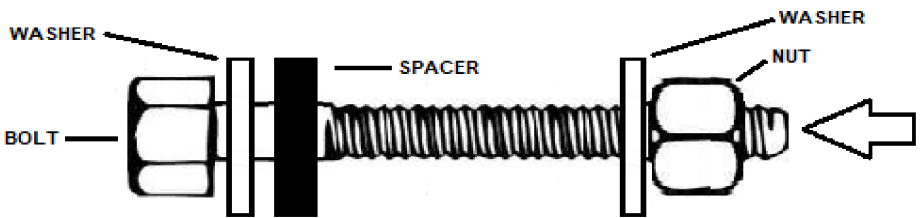

THE INCLUDED MOUNTING HARDWARE
 (BOLTS, NUTS, WASHERS, & SPACERS) TO
 BE ASSEMBLED IN ORDER SHOWN HERE

MOUNTING HARDWARE INSTALLATION:

DRAWING NOT TO SCALE

- MOUNTING HARDWARE IS PRE- ASSEMBLED IN INSTALLATION ORDER BEFORE SHIPPING
- INSTALL ALL MOUNTING HARDWARE IN ORDER SHOWN ABOVE.
- SPACER GOES BETWEEN MOUNTING PLATE & FRONT BUMPER FACE TO PROTECT FROM RUBBING ON BUMPER FACE.
- TIGHTEN ALL SECURELY TO ENSURE PROPER FIT MOUNTING PLATE WILL PULL IN TIGHT TO FORM AGAINST BUMPER WHEN COMPLETE.
- ONCE BRACKET IS SECURELY MOUNTED INSTALL DESIRED LIGHT(S)

Please make sure to check behind bumper for wiring harness & protect/ reposition the wires before drilling to prevent melting/ damage.

**MAKE SURE TO SEND US PHOTOS OF YOUR VEHICLE AFTER COMPLETE INSTALL WITH LIGHTS TO POST ON OUR WEBSITE.
 WE WILL BLUR OUT YOUR LICENSE PLATE AND POST ONLY YOUR FIRST NAME, CITY, & STATE. THANK YOU FOR YOUR BUSINESS!!!**